


# LEGNOLANDIA



MULTI SPRING - Rev. 0

## ISTRUZIONI DI MONTAGGIO

## MONTAGE ISTRUCTIONS

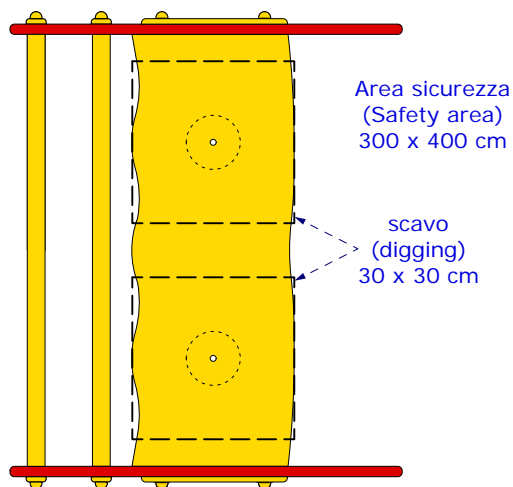

Livello del terreno  
(ground level)

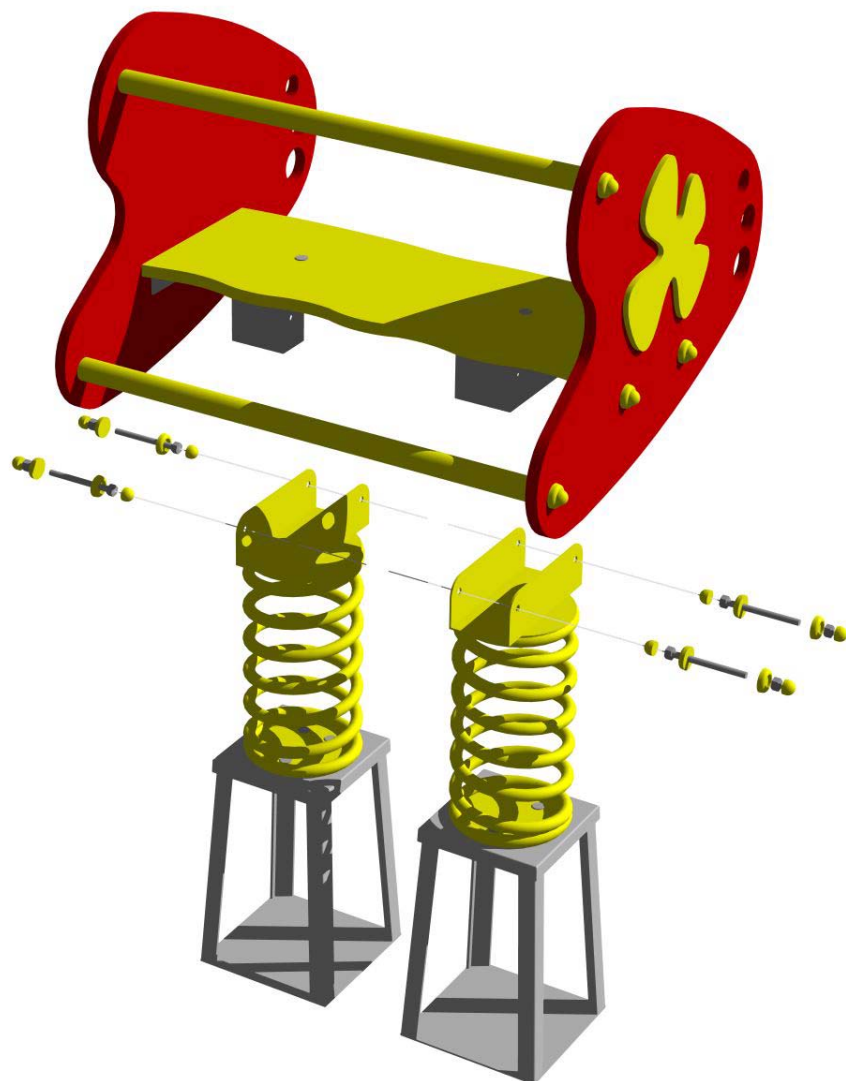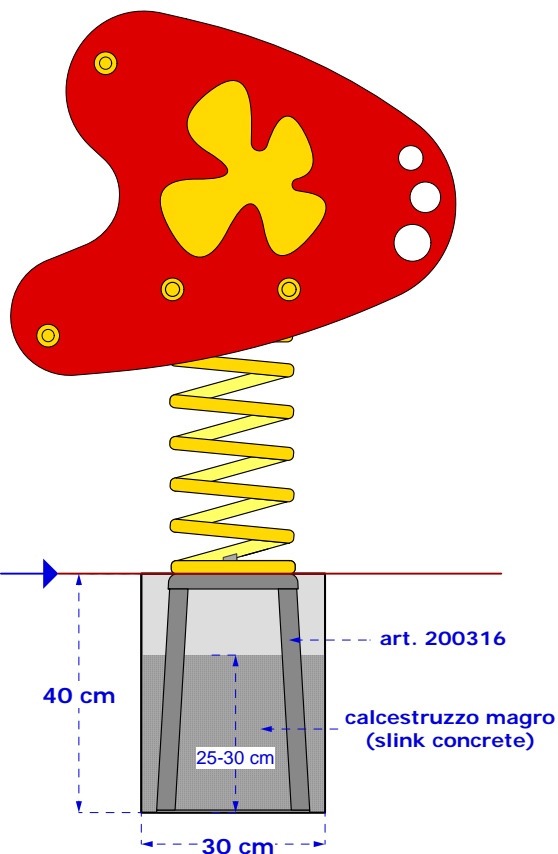

### Fissaggio (fixing):

4 Bulloni (bolts) TE Ø 10x130 mm

4 Dadi (nuts) AB Ø 10 mm

8 Copridadi (covers)

### Articoli Correlati (correlated items)

Art. 011420



Art. 011422



Art. 011424



Art. 011426



Art. 011429

